 




Application Procedure

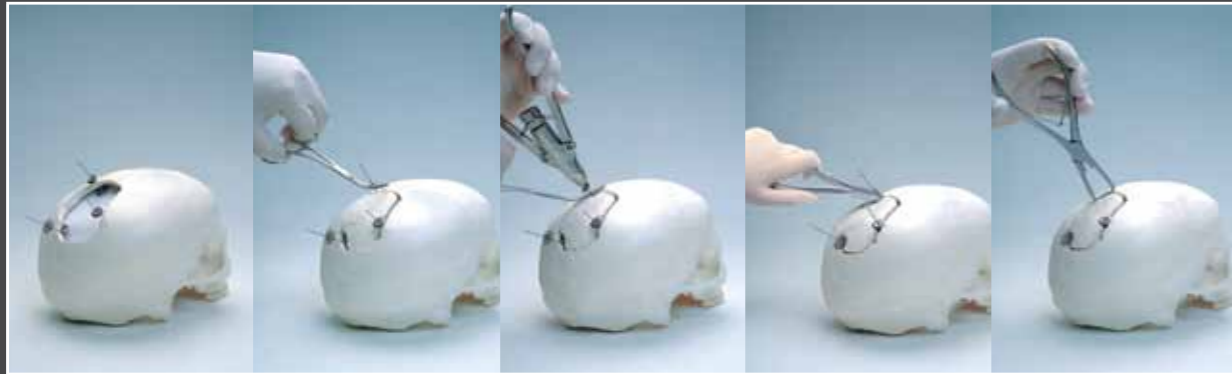

Head Office



 
JEIL MEDICAL CORPORATION
702-703-704-705-706-804-805-807-812-ho,
55, Digital-ro34-gil, Guro-gu, Seoul,
152-728, Korea

Tel : 82.2.850.3504 Fax: 82.2.850.3537
www.jeilmed.co.kr
global@jeilmed.co.kr

LBEN-M0701(02)



Speedy Flap

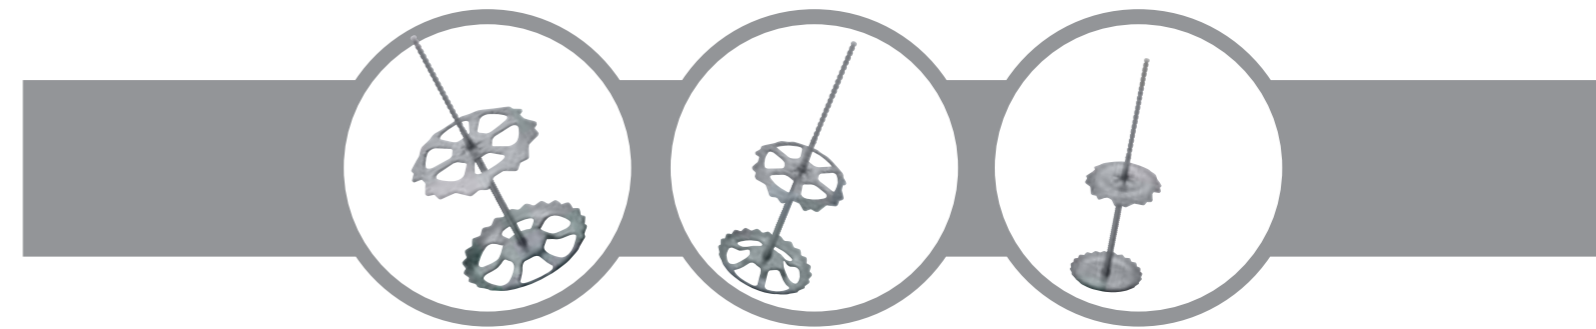

Cranial Bone Flap Fixation System

Quick, Safe and Stable fixation of cranial bone flaps to cranium
Simple and Easy application resulting in time and the cost savings



 
Speedy Flap Clamps



- Provide rigid flap fixation
- 12, 16, 20mm diameter of disk cover for craniotomy gap and burr hole
- Made by titanium alloy(Ti-6AL-4V ELI)
- Sterile packaging for convenient use



Clinicals

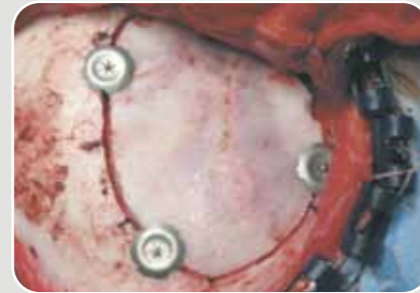


Speedy Flap Order Guide

Item	Code	Discription	Quantity
Speedy Clamp	SF-12F	Dia.12mm(Single Pack)	1
	SF-16F	Dia.16mm(Single Pack)	1
	SF-20F	Dia.20mm(Single Pack)	1
Instrument	SF-001	Applying Forceps	1
	SF-003	Rod Cutter	1
	SF-004	Holding Forceps	1
	SF-005	Removal Forceps	1
	SF-006	Wrench	1
	SF-007	Driver	1
Instrument Tray	SF-002	Autoclave Tray	1



 Application Procedure

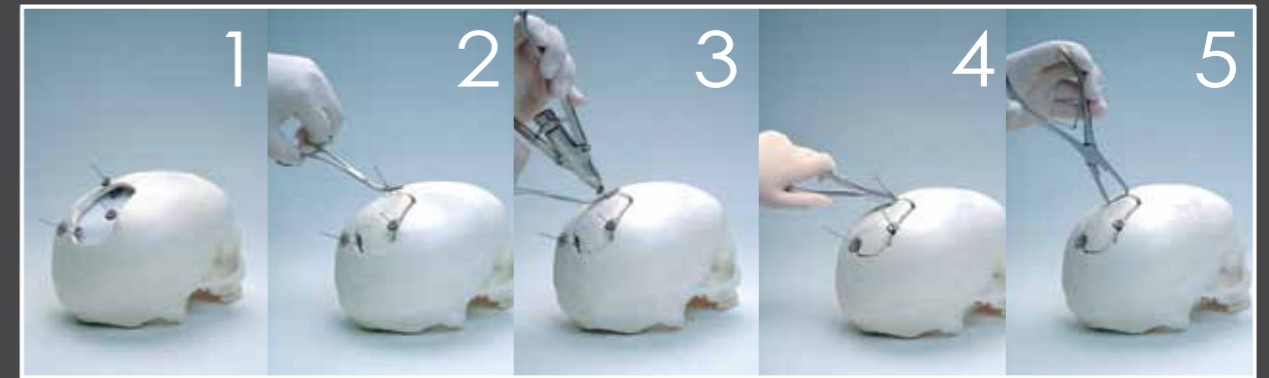

- 1 The speedy flap clamp is positioned equidistantly by inserting the lower clamp between the dura and cranium. The 16, 20mm diameter clamp is positioned for the burr hole. The 12mm diameter clamp is positioned for the craniotomy gap.
- 2 Replace the bone flap in its original position. The holding forceps holds the clamp in place to prevent unintentional movement.
- 3 The applying forceps is brought into position above the rod of Speedy Flap. The handles of applying forceps are pressed together to tighten the clamp against the cranium. Remove the Holding forceps prior to final tightening.
- 4 Remove external protruding portion of Rod with Rod cutter, which must be held.
- 5 The removal forceps can be used to detach when re-entry is required.

Speedy Flap Instruments

SF-001

Applying Forceps

Can be disassembled for cleaning and sterilization
Easy and accurate to tight clamp against the bone flap



SF-003

Rod Cutter

To remove the remaining external protruding portion of the rod
Blades can cut off rod directly above the upper clamp



SF-004

Holding Forceps

To prevent clamp movement during application
To prevent the lower clamp from pressing the dura during application



SF-005

Removal Forceps

Simply remove the upper clamp from clamp assembly
Self retaining teeth holds the upper clamp

